

## Pumpkin Lantern assembly instructions.

### Important reminders for success:

- Professional installation highly recommended. Warranty void if not installed by licensed professional
- Two people recommended for installation.
- Never allow fixture to hang by electrical wire only during installation.
- Never twist electrical wire during installation.

1. Unscrew loop w/screw (F) and 1 rubber washer (G) from threaded rod (K). Slide cord off.
2. Locate smoke bell (H). Slide cord through hole in smoke bell, then place over threaded rod, ensuring one rubber washer on each side of bell.
3. Run cord back through loop, then screw loop back onto rod. DO NOT over tighten. Tighten set screw on side of loop.
4. Attach hanging chain (E). Slip S hook in chain over loop (F) and close.
5. While 2<sup>nd</sup> person supports fixture, thread cord through chain, skipping about every 4 links. Thread through hole in hook (D) and threaded rod (B). Attach electrical wires to box, then secure ceiling canopy (C) by screwing hook onto threaded rod. DO NOT twist electrical wires.
6. Attach other end of chain to ceiling cap hook (D). Overall length can be adjusted by removing links. Once removed, links are not replaceable however.
7. Locate glass pumpkin. Attach glass dome to light assembly by hooking 3 chains (I) over peacock beaks. Center evenly. Chains are adjustable.

